EQUIPMENT AVANTCO

User Manual

Avantco Continuous Feed Food Processor

Model: CFP5D

Please read and keep these instructions. Indoor use only.

Safety

1. The food processor must be managed by skilled personnel that are familiar with the instructions for use and safety contained in this manual.

2. This machine comes with several safety systems but users must avoid setting their hands and loose objects near the cutting discs and moving parts.

3. Before any cleaning and maintenance operations, check to make sure the machine is disconnected from the power source.

4. Never use the food processor to with frozen food.

5. Never replace or repair parts on your own. Consult an authorized service agency.

6. Operate the processor on a clean, dry and level surface.

7. If the power cord is damaged, do not use. Contact the distributor for a replacement power cord.

Installation and Operation

1. Unpack your food processor and place on a clean, dry surface

2. Inspect the unit for damage, including the power cord. Do not use if any damage is found.

3. Locate the unit near a 110-120v 1phase outlet. If you are unsure of the electrical connection- contact a qualified electrician before using.

4. It is recommended to clean the equipment prior to first use.

Use of the Equipment

Controls

1. Green button for starting the machine.

2. Red button for stopping the machine.

Setting the Discs on the Machine

Rotate the knob as shown in figure n.1 And open the cover. First set the plastic ejecting disc (2), then the disc selected for the cutting on top of the plastic disc. Close the cover and reverse the rotation of the handle. Hit the start button to automatically hook the discs in the correct position.

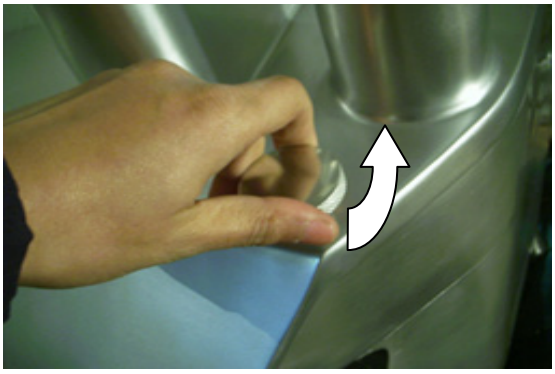

Cover Opening (1)

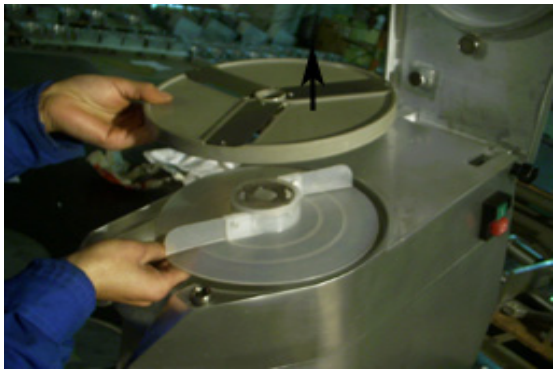

Disc Position (2)

Setting and Cutting the Food

Lift the handle and set the food inside the opening as shown in figure n.3, Then close the handle.
Press the green start button with your right hand, and with your left hand, lightly move the handle downwards until food has passed through the hopper.

Lift the handle to add more food. The machine starts automatically when the handle is closed. Repeat these operations as needed.

WARNING: NEVER USE YOUR HAND TO FEED ANYTHING THROUGH THE HOPPER

Release and Replacement of the Discs

Turn the handle and lift the cover. (Fig.1)
Turn the d isc anticlockwise and cover the cutting edge with appropriate material as (rubber, fabric, etc), then lift it by setting your hand under the disc.

(4)

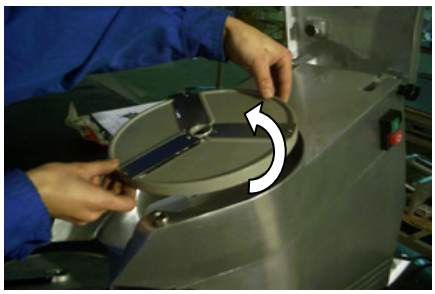

(5)

Cleaning and Maintenance Operations

Before carrying out any cleaning or maintenance operations, check to make sure that the mains switch is off and the plug disconnected.

Use a damp cloth and a non-abrasive detergent to clean the machine and discs.

The discs are dishwasher safe. Do not run the base unit in the dishwasher.

Never use steel wool or any abrasive chemicals on the discs or machine.

Technical Specifications

MODEL	DIMENSIONS	WEIGHT	POWER	ELECTRICAL CONNECTION	RPM
CFP5D	9”X22.5”X20”	51LBS	550 WATTS	110V 1 PHASE 60Hz	270

Wiring Diagram
110V

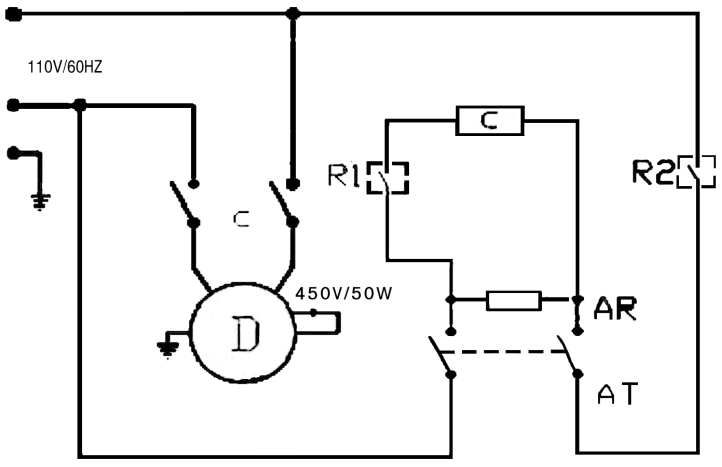

Parts Diagram

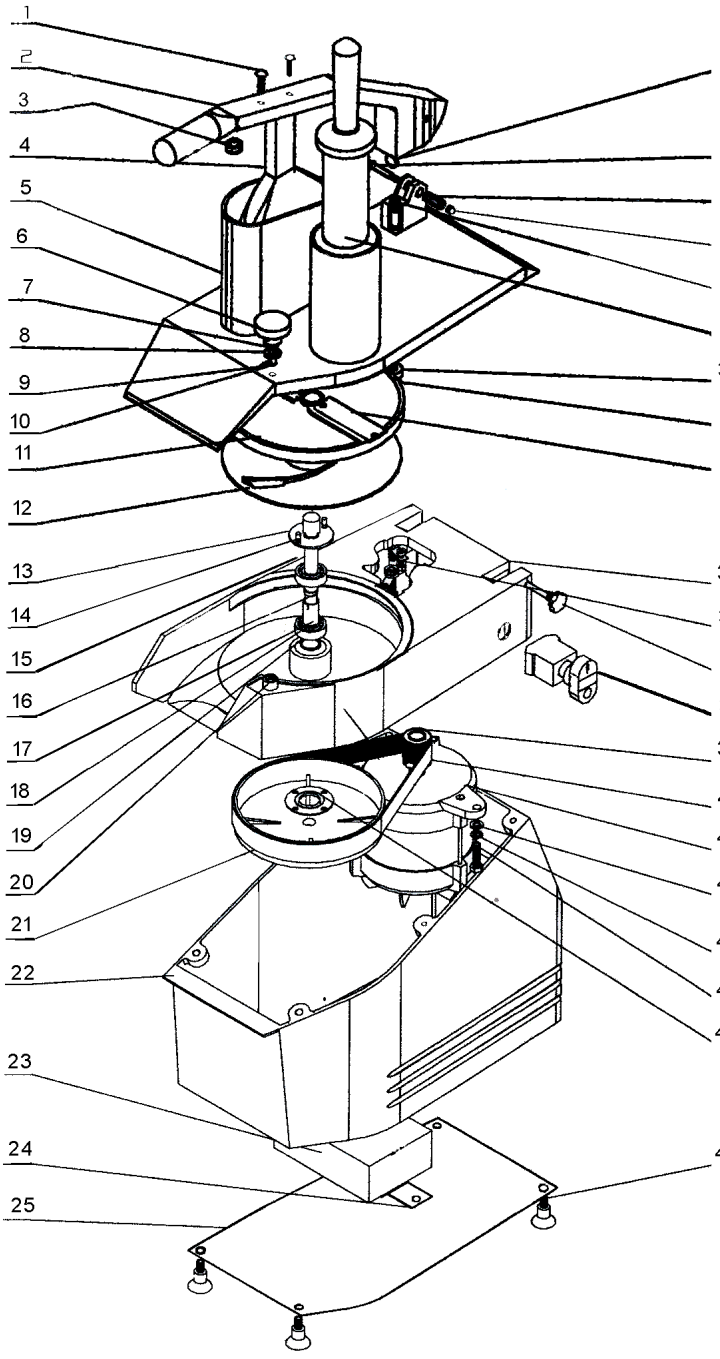

No.	Part Name
300-001	Bolt
300-002	Handlebar
300-003	Nylon gasket
300-004	Pressing piece
300-005	Input body
300-006	Anchor knob
300-007	Spring
300-008	Gasket
300-009	Pin
300-010	Anchor spindle
300-011	Knife disc
300-012	Drain disc
300-013	Anchor board
300-014	Pin
300-015	Oil envelope
300-016	Central spindle
300-017	Isolated sheath
300-018	Gear
300-019	Block circle
300-020	Anchor sheath
300-021	Belt wheel
300-022	Seat of body
300-023	Electric box
300-024	Bottom board of electric box
300-025	Bottom board of body
300-026	Magnet steel
300-027	Umbrella bolt
300-028	Steel sheath
300-029	Nut
300-030	Adjusting bolt
300-031	Plastic pressing stick
300-032	Seat of magnet
300-033	Magnet steel
300-034	Knife
300-035	Body
300-036	Microswitch
300-037	Waved bolt
300-038	Switch
300-039	Strapped wheel
300-040	Belt
300-041	Motor
300-042	Gasket
300-043	Gasket
300-044	Bolt
300-045	Gear cover
300-046	Bolt

Limited Warranty

All equipment, which is sold under Avantco trademark and used for commercial purpose is warranted against defects in materials and workmanship. The warranty runs for one year from the date of original installation and is for the benefit of the original purchaser only. All other Warranties, Expressed or Implied, Statutory or Otherwise, including Withoutimitation any implied Warranty of Merchantability or Fitness for Purposes are excluded. The Seller shall in no event be liable for direct, indirect or consequential damages in connection with Avantco commercial products.

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set – up, supervision when required or if the equipment is installed or operated in any manner contrary to thE installation and operating instructions. In these cases, repairs will be made at a reasonable cost. Work performed by unauthorized personnel or unauthorized service agencies voids this Warranty.

This warranty does not apply to, and Avantco is not responsible for, any warranty claims made on products sold or used outside of the United States.